


Mounting Plate Screw Adjustment Instructions:


1. Remove mounting plate screw knob assembly from articulator by unscrewing it from the frame of the articulator.



2. Loosen set screw in screw knob with hex wrench.

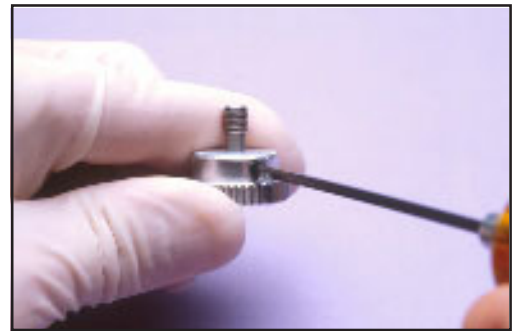

3. Press screw shaft into screw knob with finger.

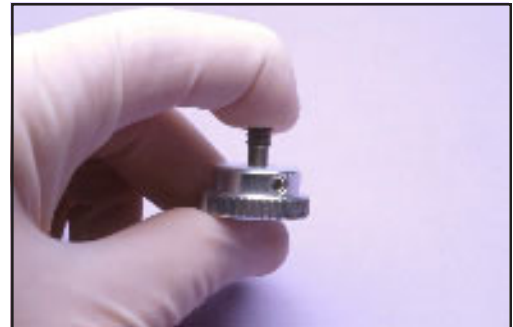

4. Tighten set screw in screw knob with hex wrench to secure screw shaft. Place screw knob assembly back into articulator.

