


Remove plastic incisal table from articulator.




Place adjustable incisal table and lock in place with small thumb screw.




Adjust incisal guidance desired and lock in place with large thumb screw.

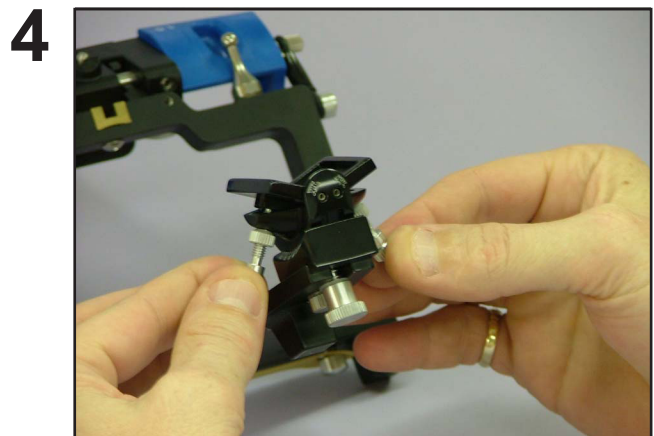

Adjust lateral guidance desired with lateral adjustment screws.

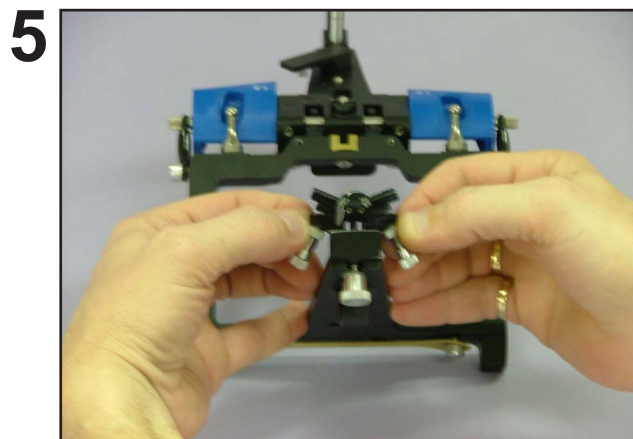

Lock lateral guidance by tightening the lateral lock nuts.

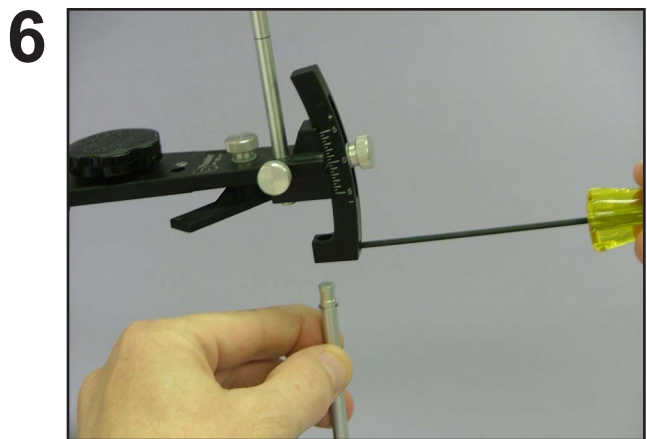

For the PCH articulator (shown), place new shovel point incisal pin with hex wrench. For the SH or PSH articulator, invert incisal pin with shovel point down.